
Seat Ventilation and Heating, Rear , (4A4),(KU0),(KU1),(KU2),(4D1)

From June 2011



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



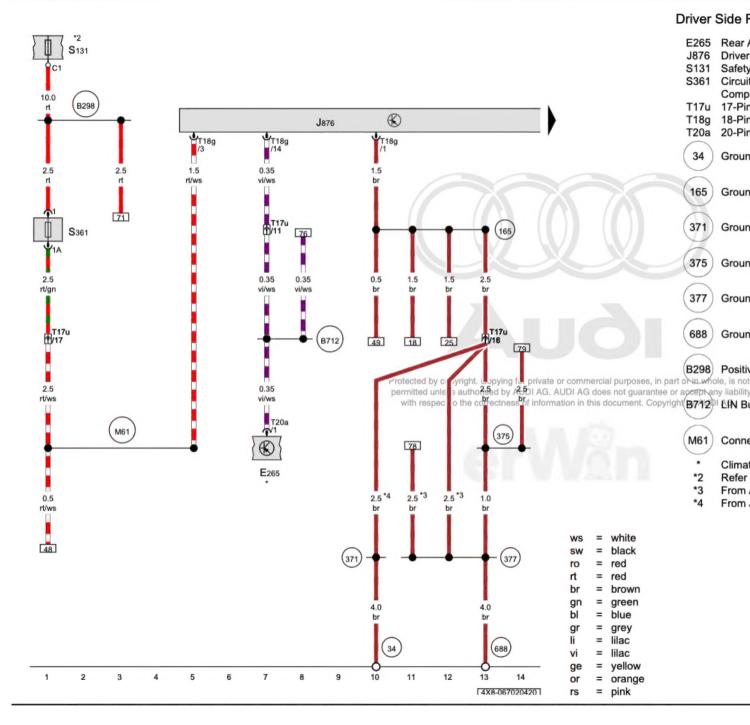

Driver Side Rear Seat Adjustment Control Module

- E265 Rear A/C Display Control Head
- Driver Side Rear Seat Adjustment Control Module
- S131 Safety Fuse 1
- S361 Circuit Breaker 1, On the Relay and Fuse Panel in the Luggage Compartment, Right
- T17u 17-Pin Connector, In the Coupling Point for the Left Rear Seat
- T18g 18-Pin Connector
- T20a 20-Pin Connector
- **Ground Connection Under Driver Seat**
- Ground Connection 1 (in Rear Seat Adjustment Wiring Harness)
- 371 Ground Connection 6 (in Main Wiring Harness)
- Ground Connection 10 (in Main Wiring Harness)
- Ground Connection 12 (in Main Wiring Harness)
- **Ground Connection 2 on Center Tunnel**
- B298 Positive Connection 2 (30) (in Main Wiring Harness)

- B712 LIN Bus Connection 7 (in Main Wiring Harness)
- M61 Connection 1 (in Rear Seats Wiring Harness)
 - Climate Control, Comfort Climatronic
- Refer to Applicable Wiring Diagram for Fuse Positions
- From August 2011
- From June 2014

(1) J876 ₽_{T18g} T18g **€**_{T18g} **₽**T18g 1.5 1.5 12 sw/ge rt/sw 012 rt/sw 013 11 T4fd 0.5 0.5 1.5 1.5 1.5 1.5 gn/br sw/ws rt/sw rt/sw sw/ge 1.5 145 T8at T8at T8at T8at 28 1.5 1.5 sw/rt sw/rt 96 T4fd 1/2 T2rm 1/2 T2rm 1.5 T2rk 个/2 T2rk 1.5 1.5 1.5 sw/ge 0.5 0.5 1.5 gn/br 1.5 rt/ws 亨 Z11 Z87 G94 Z₁₀ Z84 **Z**85 **Z**86 16 22 25 26 17 19 20 21 23 24 27 28

Driver Side Rear Seat Adjustment Control Module

- G94 Left Rear Heated Seat Temperature Sensor
- J876 Driver Side Rear Seat Adjustment Control Module
- T2rk 2-Pin Connector, Black
- T2rm 2-Pin Connector, Black
- T4fd 4-Pin Connector, In the Left Rear Seat, Black
- T8at 8-Pin Connector, In the Left Rear Seat
- T18g 18-Pin Connector
- Z10 Left Rear Bench Seat Heating Element
- Z11 Left Rear Backrest Heating Element
- Z84 Driver Side Rear Seat Left Bolster Heating Element
- Z85 Driver Side Rear Seat Right Bolster Heating Element
- Z86 Driver Side Rear Seat Left Backrest Bolster Heating Element
- Z87 Driver Side Rear Seat Right Backrest Bolster Heating Element
- 96 Ground Connection 1 (in Heated Seats Wiring Harness)
- (145) Ground Connection 3 (in Heated Seats Wiring Harness)
- O12 Connection 1 (in Heated Seats Wiring Harness)
- (O13) Connection 2 (in Heated Seats Wiring Harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

= white = black = red ro rt = red br = brown = green = blue grey = lilac = lilac = yellow = orange or

= pink

rs

4X8-067030420

Driver Side Rear Seat Adjustment Control Module

J876 Driver Side Rear Seat Adjustment Control Module


T8at 8-Pin Connector, In the Left Rear Seat

T18g 18-Pin Connector

V271 Left Rear Seat Blower Fan

V273 Left Rear Seat Backrest Blower Fan

136 Ground Connection 2 (in Heated Seats Wiring Harness)

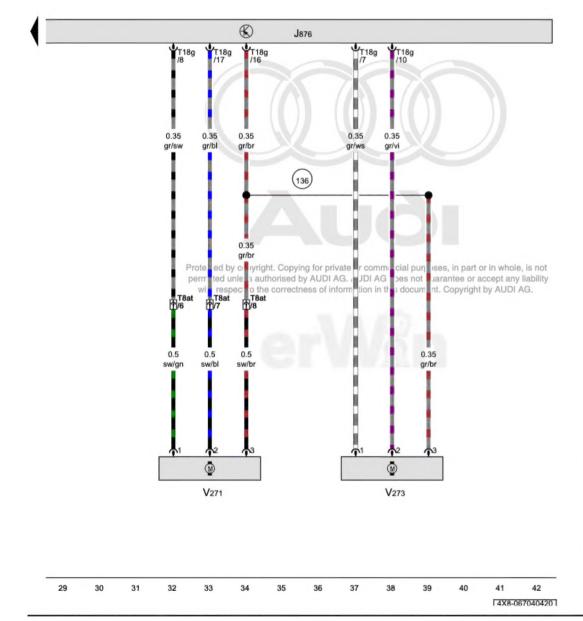

ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

= white = black

Driver Side Rear Multi-Contour Seat Control Module, Valve Block 1 in Driver Side Rear Seat, Left Rear Multi-Contour Seat Compressor

J875 Driver Side Rear Multi-Contour Seat Control Module

N479 Valve Block 1 in Driver Side Rear Seat


T6bu 6-Pin Connector, In the Left Rear Seat

V441 Left Rear Multi-Contour Seat Compressor

166 Ground Connection 2 (in Rear Seat Adjustment Wiring Harness)

M62 Connection 2 (in Rear Seats Wiring Harness)

Connection 3 (in Rear Seats Wiring Harness)

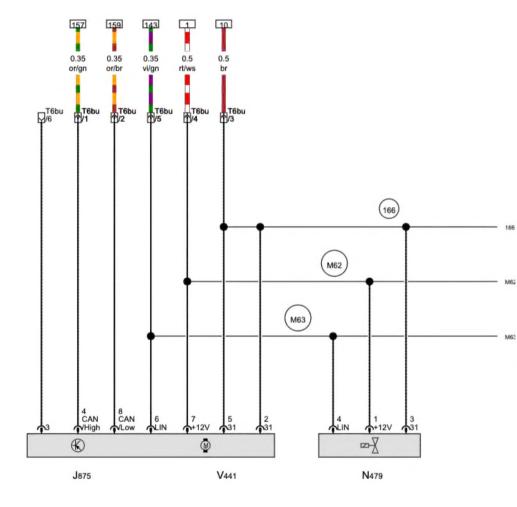

50

51

53

54

55

4X8-067050420

52

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange

= pink

rs

Wiring Diagram


Valve Block 2 in Driver Side Rear Seat, Valve Block 3 in Driver Side Rear Seat

N480 Valve Block 2 in Driver Side Rear Seat N525 Valve Block 3 in Driver Side Rear Seat

166 Ground Connection 2 (in Rear Seat Adjustment Wiring Harness)

M62 Connection 2 (in Rear Seats Wiring Harness)

Connection 3 (in Rear Seats Wiring Harness)

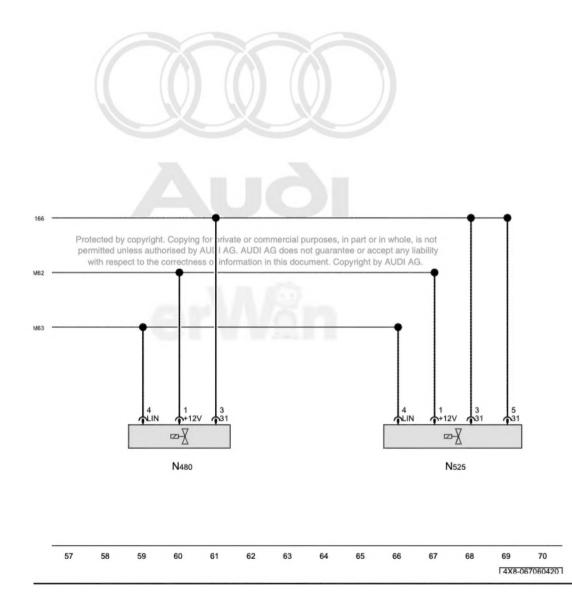

rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

= white = black

= red


72

73

74

75

76

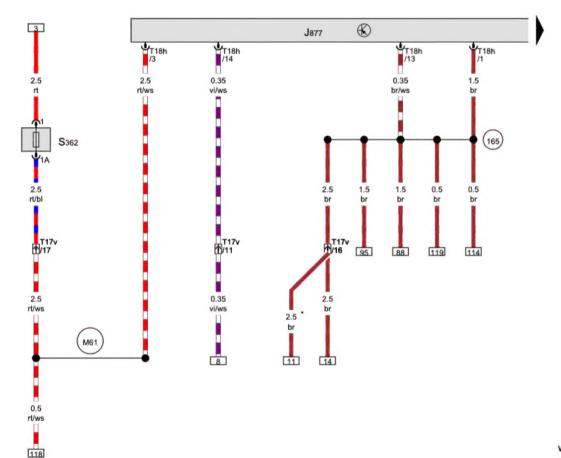

78

77

79

81

80

82

83

4X8-067070420

Passenger Side Rear Seat Adjustment Control Module, Circuit Breaker 2

- J877 Passenger Side Rear Seat Adjustment Control Module
- S362 Circuit Breaker 2, On the Relay and Fuse Panel in the Luggage Compartment, Right
- T17v 17-Pin Connector, In the Coupling Point for the Right Rear Seat
- T18h 18-Pin Connector
- 165 Ground Connection 1 (in Rear Seat Adjustment Wiring Harness)
- M61 Connection 1 (in Rear Seats Wiring Harness)
 - From August 2011




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Wiring Diagram

Passenger Side Rear Seat Adjustment Control Module

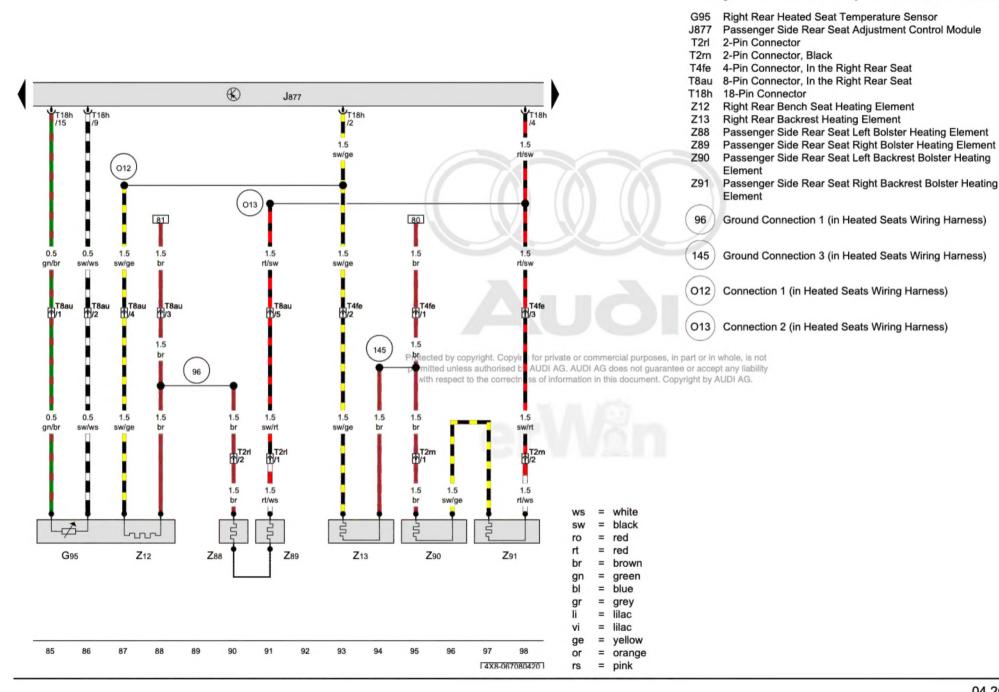

₽T18h

T8au

0.5


sw/an

100

101

Passenger Side Rear Seat Adjustment Control Module

- J877 Passenger Side Rear Seat Adjustment Control Module
- T8au 8-Pin Connector, In the Right Rear Seat
- T18h 18-Pin Connector
- V270 Right Rear Seat Blower Fan
- V272 Right Rear Seat Backrest Blower Fan
 - Ground Connection 2 (in Heated Seats Wiring Harness)

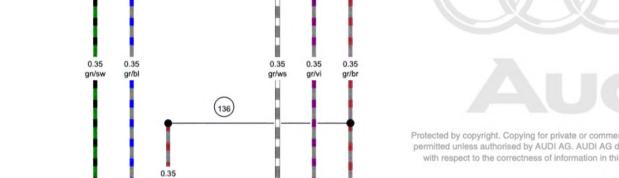

T18h /10

T18h /16

0.35

gr/br

110

111

112

4X8-067090420

W

V272

107

108

109

(

gr/br

T8au 作/8

T8au 和7

0.5

sw/bl

M

V270

102

103


105

106

J877

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

> = white = black = red = red = brown = green = blue = grey = lilac = lilac = yellow = orange or rs = pink

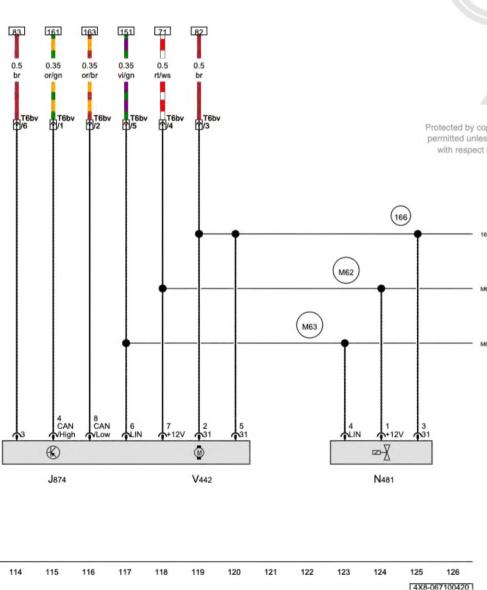

Passenger Side Rear Multi-Contour Seat Control Module, Valve Block 1 in Passenger Side Rear Seat, Right Rear Multi-Contour Seat Compressor

J874 Passenger Side Rear Multi-Contour Seat Control Module

N481 Valve Block 1 in Passenger Side Rear Seat

T6bv 6-Pin Connector, In the Right Rear Seat

V442 Right Rear Multi-Contour Seat Compressor

166 Ground Connection 2 (in Rear Seat Adjustment Wiring Harness)

M62 Connection 2 (in Rear Seats Wiring Harness)

M63 Connection 3 (in Rear Seats Wiring Harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

= white

= black

= brown = green = blue = grey = lilac = lilac = yellow

= orange

= pink

or

= red = red

Valve Block 2 in Passenger Side Rear Seat, Valve Block 3 in Passenger Side Rear Seat


N482 Valve Block 2 in Passenger Side Rear Seat N526 Valve Block 3 in Passenger Side Rear Seat

G6 Ground Connection 2 (in Rear Seat Adjustment Wiring Harness)

(162) Connection 2 (in Rear Seats Wiring Harness)

M63 Connection 3 (in Rear Seats Wiring Harness)



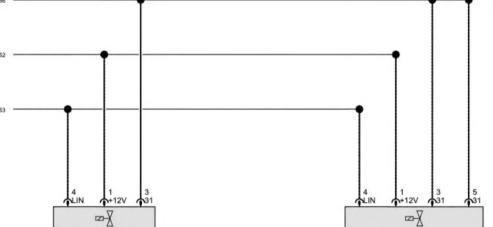

N482

129

130

131

132

133

134

135

136

137

128

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

N526

138


139

4X8-067110420

4X8-067120420

rs


= pink

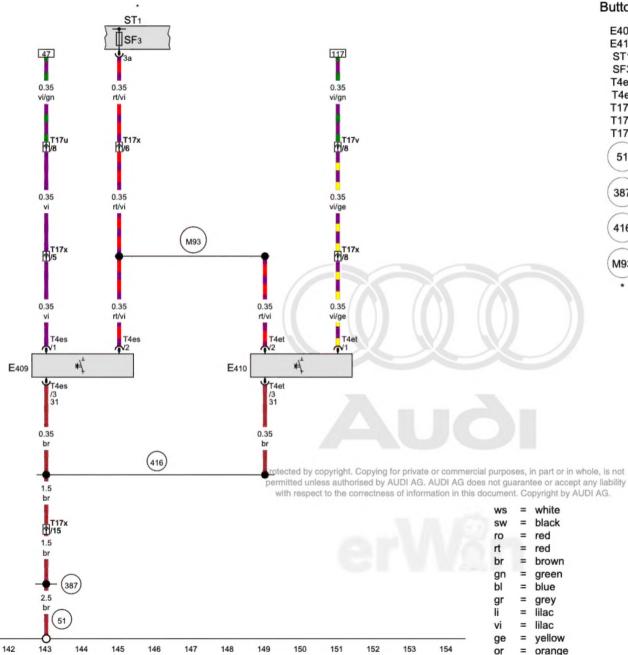

Left Rear Seat Massage Button, Right Rear Seat Massage Button

- E409 Left Rear Seat Massage Button
- E410 Right Rear Seat Massage Button
- ST1 Fuse Panel 1
- SF3 Fuse 3 (On Fuse Panel F)
- T4es 4-Pin Connector
- T4et 4-Pin Connector
- T17u 17-Pin Connector, In the Coupling Point for the Left Rear Seat
- T17v 17-Pin Connector, In the Coupling Point for the Right Rear Seat
- T17x 17-Pin Connector
- 51 Ground Connection in Luggage Compartment, Right
- 387 Ground Connection 22 (in Main Wiring Harness)
- (416) Ground Connection (in Rear Armrest Wiring Harness)
- (M93) Connection 2 (in Rear Armrest Wiring Harness)
- Refer to Applicable Wiring Diagram for Fuse Positions

Wiring Diagram

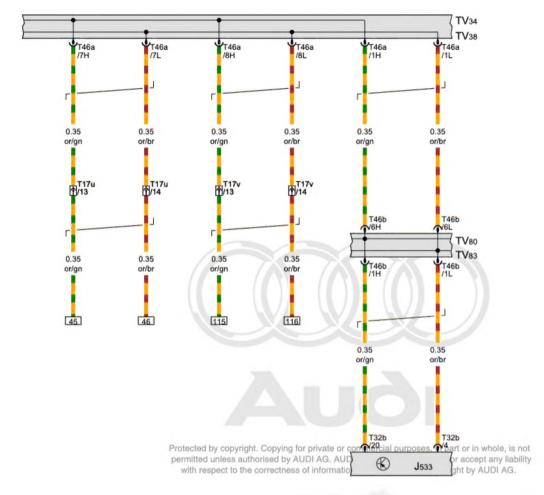

ws = white sw = black ro = red rt = red br = brown gn = green bl = blue gr = grey li = lilac vi = lilac ge = yellow or = orange rs = pink

4X8-067130420

Data Bus on Board Diagnostic Interface

| J533 | Data Bus on Board Diagnostic Interface |
|------|---|
| T17u | 17-Pin Connector, In the Coupling Point for the Left Rear Seat |
| T17v | 17-Pin Connector, In the Coupling Point for the Right Rear Seat |
| T32b | 32-Pin Connector |
| T46a | 46-Pin Connector |
| T46b | 46-Pin Connector |
| TV34 | Comfort System CAN Bus High Wire Junction |
| TV38 | Comfort System CAN Bus Low Wire Junction |
| TV80 | Comfort System CAN Bus High Wire Junction 2 |
| TV83 | Comfort System CAN Bus Low Wire Junction 2 |
| | |